


❖ *English*

PageExpress 4800 Pro

High Speed Document Scanner

[For Windows & Mac]

USER GUIDE

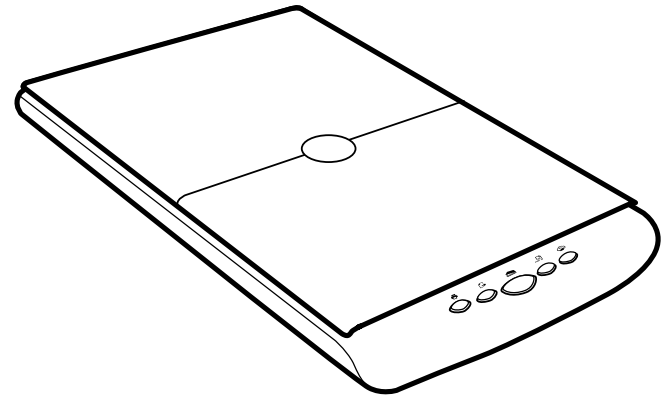

All trademarks are the property of their respective owners and all rights are acknowledged.

Images and screenshots shown inside this User Guide are example only, which may vary according to the devices used and its operating system.

All contents and specifications of this User Guide are subject to change without notice.

SAFETY AND PRECAUTIONS

General Precautions

- Keep away from water or moisture and dusty areas.
- Never store in hot and very cold areas.
- Only use attachments/accessories specified by the manufacturer.
- No objects filled with liquids, such as vases, shall be placed on the Scanner.
- Avoid dust contamination when the Scanner is not in use.
- When left unused for a long period of time, unplug the Scanner from the computer.
- Avoid environments where the Scanner would be exposed to direct sunlight (or any other source of excessive heat) for long periods of time.
- Protect the Scanner from potential liquid spills such as soda, coffee, tea, and etc.
- Be carefully to keep it without dropping it or strong impact.
- Operate the Scanner on a level, well-grounded work surface, free of excessive vibration.
- Do not open the Scanner case alone without technical support because there is danger of electrical shock.
- Position the Scanner near the computer where it can be easily accessed when plugged in.

Environmental Information




Discarded electrical and electronic appliances are recyclable and should separate from the household waste. Please actively support in conserving resources and protecting the environment by returning this appliance to the collection centers (if available).

CONTENTS


SAFETY AND PRECAUTIONS	2	Delete the Backup Files	38
CONTENTS	3	SCANNING USING TWAIN INTERFACE IN WINDOWS	39
UNPACKING THE SCANNER	4	Acquire the Scanner TWAIN Interface	39
BUNDLED DRIVERS AND SOFTWARE	5	The TWAIN Interface	40
SYSTEM REQUIREMENTS	6	The Main Tab.....	40
SCANNER PARTS	7	The Enhance Tab	41
INSTALLING DRIVERS AND SOFTWARE	8	The Filters Tab	43
How to Uninstall the Drivers and Software.....	9	The Preview Window and Controls	44
Showing/Hiding Tooltips	9	Prescan the Image	45
CONNECTING THE SCANNER	10	Set Up the Scan Parameters	45
Turning Power Off	10	Execute the Scan Command	45
PLACING THE ORIGINALS	11	Using Batch Scan	46
SCANNING PROCEDURES IN WINDOWS	12	The Batch Scan Dialog Box	46
Setting iDocScan Touch and Buttons	12	SCANNING USING TWAIN INTERFACE IN MAC	48
Scanning Using iDocScan Touch and Buttons	18	Acquire the Scanner TWAIN Interface	48
Setting iDocScan Touch (Advanced Scan)	19	The TWAIN Interface	49
Destination Tab	19	The Main Tab.....	49
Scan Settings Tab	22	The Enhance Tab	50
Scanning in Advanced Scan Mode	28	The Filters Tab	50
Preview Window Controls	30	The Preview Window	51
Continue to Scan More Pages	31	Prescan the Image	51
Delete the Backup Files	31	Set Up the Scan Parameters	51
Cancel a Scan	31	Execute the Scan Command	52
SCANNING PROCEDURES IN MAC	32	Using Batch Scan	52
Setting ScanMust and Buttons	32	The Batch Scan Dialog Box	52
Scanning Using ScanMust and Buttons	36	CLEANING THE SCANNER	54
Continue to Scan More Pages	37	TROUBLESHOOTING	55
Cancel a Scan	38	SPECIFICATIONS	56

UNPACKING THE SCANNER

Make sure following items are included in this package.

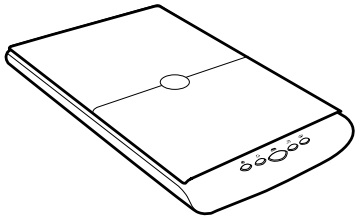

Scanner

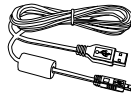 

AC Adapter
(see [Connecting the Scanner](#))



Installation DVD
(see [Installing Drivers and Software](#))



Quick Start Guide

BUNDLED DRIVERS AND SOFTWARE

YOU MUST FIRST INSTALL SCANNER DRIVER IN ORDER TO USE THE SCANNER ON YOUR COMPUTER.

[Windows]

1. Scanner Driver - Scanner Driver includes following:
 - a. TWAIN and WIA driver: it comes with TWAIN interface to use the Scanner from within any WIA or TWAIN-compliant host software applications such as Medialmpression, Photoshop.
 - b. iDocScan Touch: it is consisted of 5 Scan-to functions, including Scan to Folder, Scan to PDF, Scan to Application (Default: E-Mail), Scan to Cloud, and Scan to Print destinations, and Advanced Scan with a Preview Window for displaying the prescanned image.
 - c. Help files: this includes detailed instructions of iDocScan Touch and of the TWAIN interface.
 - d. Clean Calibration: Run this tool to clear the calibration data left from the previous scanner, when you use another same model scanner on the same computer with a previous driver.
2. ArcSoft Medialmpression - this TWAIN-compliant application serves as a host application that enables image scanning via the TWAIN interface. For detailed information of this application, see the “Help” file integrated within this application.
3. ABBYY FineReader - this application converts scanned text into searchable text when using the PDF function. For detailed information of this application, see the “Help” file integrated within this application.
4. Adobe Acrobat Reader - this application opens the scanned image that is converted into a PDF format using the PDF function.

[Mac]

1. ImageAcquire - this TWAIN-compliant application serves as a host application that enables image scanning via the TWAIN interface. For detailed instructions of ImageAcquire, see the PDF file inside the ImageAcquire folder.
2. Scanner Driver - it comes with TWAIN interface to use the Scanner from within any TWAIN-compliant host application such as ImageAcquire, Photoshop. Refer to the PDF file inside the Scanner Driver folder for detailed instructions of TWAIN interface.
3. ScanMust - this application allows you to easily scan from the Scanner buttons or within this software. For the detailed instructions of ScanMust, see the “Help” file integrated within this software.

SYSTEM REQUIREMENTS

Following minimum system requirements are recommended to achieve the best performance from the Scanner.


	Windows	Mac
Processor	Intel Core Duo or faster	Intel Core Duo or faster
Support OS	Windows XP (Service Pack 3) / Vista / 7 / 8 / 8.1 /10	Mac OS X 10.7 to 10.11 and above
Color Display	1024 x 768 resolution or above	1024 x 768 resolution or above
RAM	4GB RAM or greater	4GB RAM or greater
Free Hard Drive Space	2GB	1GB
Drive	DVD-ROM Drive for software installation	DVD-ROM Drive for software installation
Interface	Available USB port	Available USB port



NOTE



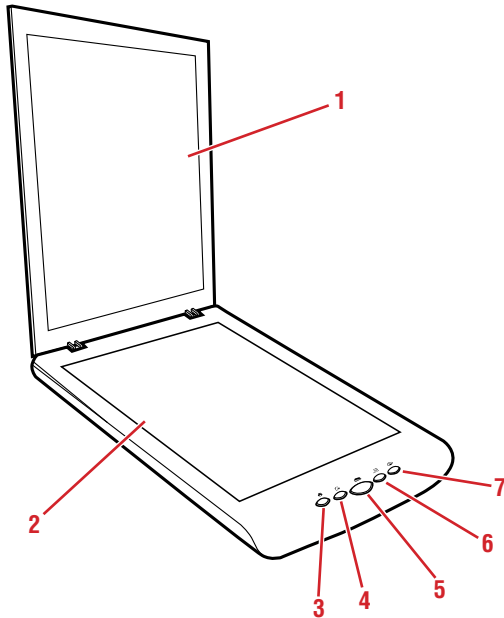


The scanning speed and performance are determined by the specifications of your computer. The higher specification of your computer, the better the Scanner will be performed.

SCANNER PARTS



Rear Side



1	Scanner Lid	Opens to reveal the Flatbed Glass.
2	Flatbed Glass	Used to scan single pages or book pages.
3		Scan directly to your printer to make copies of a scan.
4		Scan directly to your email program. For Windows, you can select either email or application (default: MS Paint) as the destination of your scan.
5		Scan directly to the selected folder.
6		Scan directly to the PDF file format.
7		For Windows, scan directly to either Google Drive or Dropbox shared folder in your computer. For Mac, scan directly to the selected application (default: Preview).
8	USB Port	Connect the USB Cable to a computer for power supply.

INSTALLING DRIVERS AND SOFTWARE

PLEASE COMPLETE THE DRIVERS AND SOFTWARE INSTALLATION BEFORE CONNECTING THE SCANNER. DO NOT CONNECT THE USB CABLE TO THE SCANNER OR COMPUTER AT THIS MOMENT.

[Windows]

1. Insert the Installation DVD into the DVD-ROM drive of the computer. The DVD will run automatically, and then the installation window appears on the screen as following:




If the DVD does not run automatically, locate the drive on the computer and double click on "AUTORUN.exe" file.



2. Click "Scanner Driver" from the installation window.
3. Select a preferred language from the "Choose Setup Language" list.
4. Click "Next" when the Welcome screen appears, and then follow on-screen instructions to complete installation.
5. Return to the installation window to install other software to your computer to enable certain functions.

[Mac]

1. Insert the Installation DVD into the DVD-ROM drive of the Mac.
The Autorun disc icon appears on your desktop.
2. Double click on the Autorun disc icon.
The content of the disc is displayed in the Autorun folder as following:

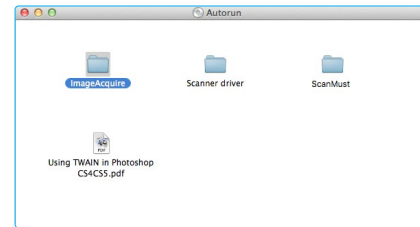

3. Double click the "Scanner Driver" folder, then "PageExpress 4800 Pro.pkg" to start the installation process.
Follow on screen instructions to complete the installation procedures.
4. Return to the Autorun folder. Double click the "ScanMust" folder, and then "ScanMust Installer.pkg" to start the installation process.
Follow on screen instructions to complete the installation procedures.
5. Return to the Autorun folder. Double click the "ImageAcquire" folder, and then "ImageAcquire.pkg" icon to start the installation process.
Follow on screen instructions to complete the installation procedures.

INSTALLING DRIVERS AND SOFTWARE (CONTINUED)

How to Uninstall the Drivers and Software

When you need to remove the scanner drivers and software from your computer, uninstall as following:


[Windows]

1. Unplug the USB Cable connecting from the computer.
2. Exit all running applications.
3. Go to the “Start” menu, select “(All) Programs”, “PageExpress 4800 Pro”, and then click “Uninstall”.
4. Follow the on-screen instructions to remove the Scanner Driver.

[Mac]

1. Unplug the USB Cable connecting from the computer.
2. Exit all running applications.
3. Insert the Installation DVD.
4. Double click on the UninstallDriver icon in the Scanner Driver folder to remove it.


Uninstall Driver

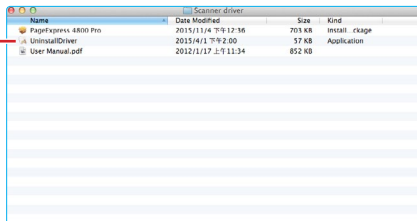


5. Drag ImageAcquire icon and ScanMust icon from the “Application” folder to Trash.

Showing/Hiding Tooltips


You can show (default) or hide the tooltips for the iDocScan Touch panel and the settings page when you are familiar with the instructions.

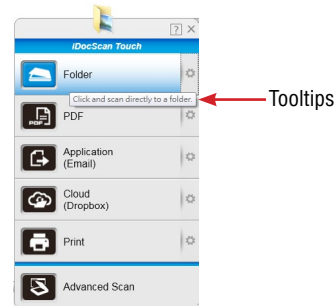

Right-click on the Scanner icon [🖨️] from the system tray to bring up the following menu, then click on **Show Tooltips**.

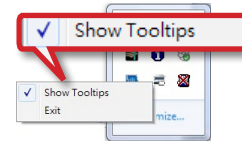


The check mark disappears, indicating that the tooltips is hidden.

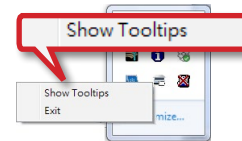


To show the tooltips again, click on **Show Tooltips** to check mark it.

CONNECTING THE SCANNER


1. With the computer on, connect supplied USB Cable to the Scanner's USB Port and the other end to the computer.

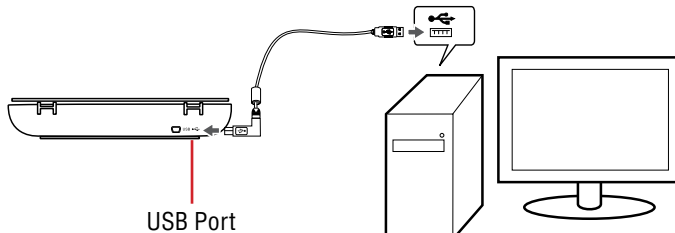

 2. After a few moments, your computer will automatically detect your scanner:
 - (a) Windows computer will detect the Scanner as a Removable Disk and automatically loads iDocScan Touch [] in the system tray.

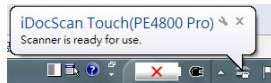

iDocScan Touch icon might be hidden, and require that you click the arrow in the system tray to reveal it.

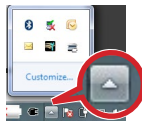

- (b) Mac computers will automatically launch the ScanMust software in the menu bar.



NOTE


- If your Windows computer does not appear the Scanner icon [] in the system tray, from the “Start” menu, click “(All) Programs” > “PageExpress 4800 Pro” > “iDocScan Touch(PE4800 Pro)”.
- If your Mac computer does not appear the Scanner icon [] in the menu bar, open “Finder” and then click “Applications”. Find ScanMust in the Application folder, and then double click on it to open it in the menu bar.

Turning Power Off


To turn off the power, unplug the USB Cable from the computer.

PLACING THE ORIGINALS

1. Open the Scanner Lid.

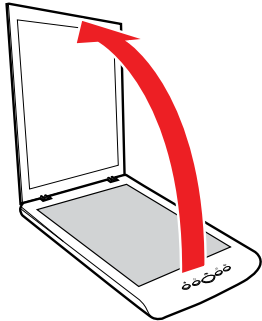

2. Place the original facing down on the Flatbed Glass, and then align the original at the top right corner.

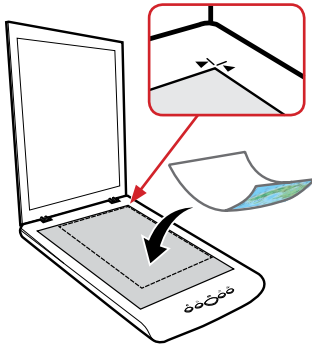

3. Close the Scanner Lid.




- Do not place heavy items on the Scanner Glass or press on the Scanner Glass with too much force as this will cause damage to the glass surface.
- Do not place any objects which may scratch the glass on the scanner.

SCANNING PROCEDURES IN WINDOWS


Setting iDocScan Touch and Buttons

You can setup the scanner buttons to perform certain actions within the iDocScan Touch software.

1. Click the Scanner icon [🖨️] from the system tray to bring up the iDocScan Touch panel.

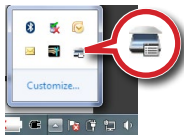


2. Click [⚙️] (Settings) by the following 5 scan to functions to open the Settings dialog box.

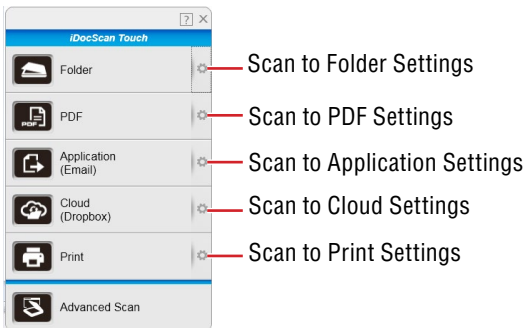


3. The Settings window appears. You can change the settings as following:


Scan to Folder Settings

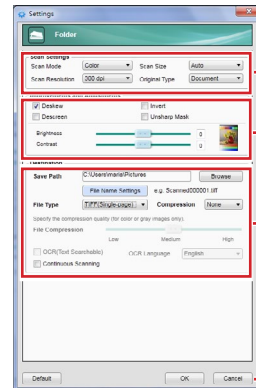


Scan to PDF Settings

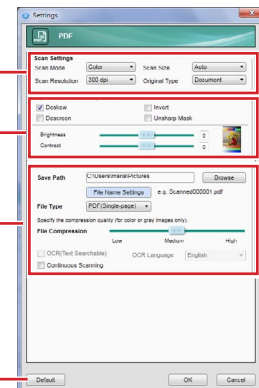

Scan to Application Settings

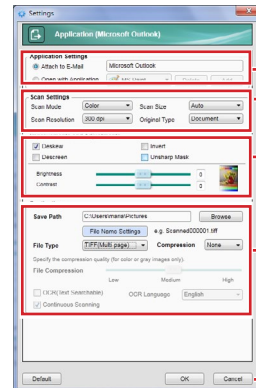


Scan to Cloud Settings

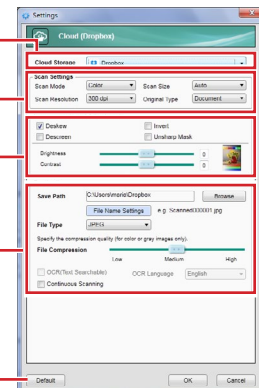

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

Scan to Print Settings

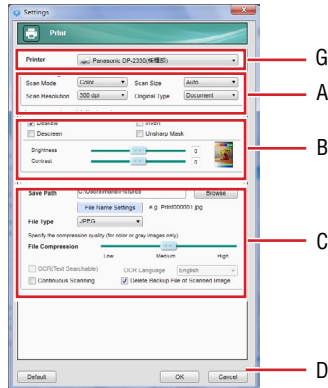

A. Scan Settings

Scan Mode	<p>Select a mode to scan your originals with following choices: “Color”, “Gray”, “B/W” .</p> <ul style="list-style-type: none"> ● Color: Select it to scan the color photographs, documents, and items containing colors in full color. ● Gray: Select it to scan the image in grayscale using varying shades of gray. ● B/W: Select it to scan text-only originals or line drawings.
Scan Resolution	<p>Select the resolution of the image to be scanned with following choices: “100dpi”, “200dpi”, “300dpi”, “600dpi”, “1200dpi”.</p> <ul style="list-style-type: none"> ● The higher the resolution, the bigger the file size. ● “100dpi” is disabled when “OCR (Text Searchable)” is checked.

Scan Size	<p>Select the output size of the image to be scanned with following choices: “Auto”, “A4”, “B5”, “Letter”</p> <ul style="list-style-type: none"> ● Select “Auto” to automatically detect the paper size and crop scanned image. When scanning darker originals (i.e. night scenery photos), over-cropping may occur.
Original Type	<p>Select an option according to the type of original to auto-adjust overall brightness and contrast for the scanned image.</p> <ul style="list-style-type: none"> ● Document: Originals with mainly text. ● Photo: Originals with mainly color pictures. ● Magazine: Originals with both text and color pictures.

B. Improvements and Adjustments


Deskew	<p>Correct the skew image approximately +/-15 degrees. (The results of Deskew do not appear in the preview image, only in the scanned image.)</p> <div style="text-align: center;"> </div> <ul style="list-style-type: none"> ● Deskew is enabled when the Scan Size set to “Auto”. ● Originals with darker backgrounds and dark text are difficult to deskew. Deskew may not work properly when deskewing dark images. ● Deskew can only correct one skew image at a time. ● This function cannot work with a large skew angle.
--------	---

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

Descreen

Descreening helps to reduce moire patterns in magazines or other printed materials. After descreening, the image may appear blurry.

Example:




The image shows two side-by-side close-up photographs of a person's eyes. The left image is labeled 'Original' and shows a distinct moiré pattern. A red arrow points to the right image, labeled 'Descreen applied', which is the same photograph but with the moiré pattern removed, resulting in a smoother, slightly blurred appearance.

NOTE

- If the “Unsharp Mask” function is enabled, some moire pattern may not reduce even when the Descreen is enabled. In such cases, disable the “Unsharp Mask”.
- Scanning takes longer than usual when you enable the Descreen function.


This function reverses the colors of the scanned image to the opposite colors.

Example of black text with white background to be inverted:

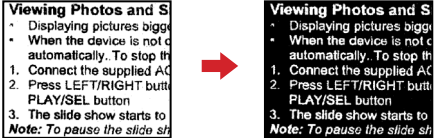


The image shows two screenshots of a document page. The left screenshot, labeled 'Original', shows black text on a white background. A red arrow points to the right screenshot, labeled 'Invert applied', where the text is white and the background is black.

Example of grayscale picture to be inverted:

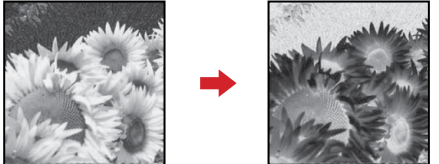




The image shows two grayscale photographs of a bouquet of flowers. The left image is labeled 'Original' and shows the flowers in shades of gray. A red arrow points to the right image, labeled 'Invert applied', where the colors are reversed, making the dark parts of the flowers appear light and vice versa.

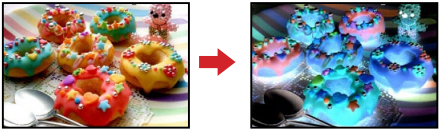

Example of colored picture to be inverted:



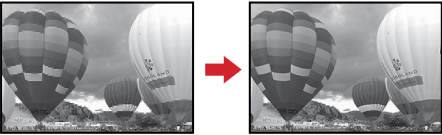


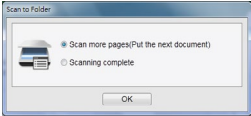
The image shows two photographs of several colorful donuts. The left image is labeled 'Original' and shows the donuts in their natural colors. A red arrow points to the right image, labeled 'Invert applied', where the colors are completely reversed, making the red donuts appear cyan and the yellow ones appear magenta.

SCANNING PROCEDURES IN WINDOWS (CONTINUED)



Unsharp Mask	<p>This function helps to emphasize edges in the image more clearly for an overall sharper image.</p> <p>Example:</p> <div style="text-align: center;">  </div> <p style="text-align: center;">Original Unsharp Mask applied</p> <p> NOTE</p> <ul style="list-style-type: none"> • The Unsharp Mask may not work properly for poorly focused or out of focus images. • You are recommended to disable the Unsharp Mask when the moire is not being reduced even with the “Descreen” function enabled.
Brightness	<p>Use the slider to increase or decrease the value (-127 ~ +127) and to adjust the image brighter or darker. You can view the sample image to the right side of the slider for the result of the value.</p> <p> NOTE</p> <p>Brightness is enabled in “Color” and “Gray” mode, but not in the B/W mode.</p>



Contrast	<p>Use the slider to increase or decrease the value (-127 ~ +127) and to adjust the contrast higher or lower. The bigger the value is to set towards +127, the more contrast is between lighter and darker areas. You can view the sample image to the right side of the slider for the result of the value.</p> <p> NOTE</p> <p>Contrast is enabled in “Color” and “Gray” mode, but not in the B/W mode.</p>
C. Destination	
Save Path	<p>Indicate the folder where image files are saved. Click Browse to specify a file folder to save the scanned image.</p> <p> NOTE</p> <ul style="list-style-type: none"> • You cannot specify folders where root privileges are required.
File Name Setting	<p>The filename can be created with a prefix in the Prefix field up to 20 characters, i.e. Scanned000001.jpg</p>

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

<p>File Type</p>	<p>Select a file format to save scanned image with following choices: “JPEG”, “BMP”, “TIFF (Single-page)”, “TIFF (Multi-page)”, “PDF (Single-page)”, “PDF (Multi-page)”.</p> <p> NOTE</p> <ul style="list-style-type: none"> • PDF (Single-page) and TIFF (Single-page) are used for splitting the multi-page originals into single files. • PDF (Multi-page) and TIFF (Multi-page) are used for combining multiple scans into one file. The “Continuous Scanning” dialog will be triggered automatically for scanning more page. 	<p>Compression Quality slider</p> <p>When JPEG, PDF or TIFF (Compression: JPEG) file is selected in the File Type, the Compression Quality slider is enabled. Use the slider to compress a file to reduce the total size in High, Medium, or Low. The higher the compression level, the lower the file size, and vice versa.</p> <p> NOTE</p> <p>The Compression Quality is only available in the Color and Gray mode, but not in the B/W mode.</p>
<p>Compression</p>	<p>When TIFF file is selected in the File Type, the Compression format is enabled with following choices:</p> <ul style="list-style-type: none"> • None: No compression is used. • LZW: LZW is a compression method that results in no loss of data. The file size is closer to the actual size of the color data. • JPEG: JPEG is a lossy compression method that results in some data is lost. This method is best used to reduce the large file size. <p> NOTE</p> <ul style="list-style-type: none"> • The Compression is only available in the Color and Gray mode. • TIFF (JPEG compression) is enabled up to 600 dpi. This option to compress 1200 dpi is not available. 	<p>OCR (Text Searchable)</p> <p>This function is checked by default when selecting PDF (Multi-page) and PDF (Single-page) file in the File Type. It can recognize and convert your scanned image into a text based file that can be searched and edited.</p> <p>OCR Language</p> <p>This function is enabled when OCR (Text Searchable) is selected. Ensure to select the correct language of the original text from the drop-down menu to perform text recognition.</p>
		<p>Continuous Scanning</p> <p>Check this option to trigger the continuous scanning dialog box after the current page is scanned, allowing you to continue scanning for more pages. (See Continue to Scan More pages).</p> 

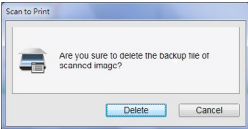SCANNING PROCEDURES IN WINDOWS (CONTINUED)


Delete Backup File of Scanned Image	<p>This function is enabled when Scan to Application (Email) or Scan to Print is selected.</p> <p>Check this option to trigger the delete backup file dialog box after the scanning process completes, allowing you to delete the backup file (See Delete the Backup Files).</p> 
D. Buttons	
Default	Reset the Settings to the default for respective scan-to function.
Cancel	Cancel the changes, and close the Settings window.
OK	Apply the scan-to function with the settings you changed, and close the Settings window.
E. Application Settings (Available in Scan to Application)	
Attach to E-Mail	<p>Select "Attach to E-Mail" as the destination of your scan. The system detects and displays the default email client (e.g. Outlook) on your computer.</p> <p> NOTE</p> <p>Make sure an email account has been configured.</p>

Open with Application	<p>Select "Open with Application" (default: MS Paint) as the destination of your scan.</p> <p>To add a new application, click Add and navigate to the .exe files in the Program folder, then select it to add in the application list.</p> <p>To delete the application, select it from the dropdown menu, then click Delete to remove the application.</p> <p> NOTE</p> <ul style="list-style-type: none"> • Please make sure the application supports the File Type selected. • The default application (MS Paint) cannot be deleted.
F. Cloud Storage (Available in Scan to Cloud)	
Cloud Storage	<p>Select either "Dropbox" or "Google Drive" from the dropdown menu as the destination of your scan.</p> <p> NOTE</p> <ul style="list-style-type: none"> • To use this function, you must have a Dropbox and a Google Drive account. Dropbox and Google Drive must be installed on your computer and has been logged in. • If Dropbox or Google Drive shared folder is not detected, a warning message will appear.
G. Printer (Available in Scan to Print)	
Printer	Select an available printer as the destination of your scan. The system can detect and display the default printer which is connected to your computer.


SCANNING PROCEDURES IN WINDOWS (CONTINUED)

Scanning Using iDocScan Touch and Buttons


1. Place the original on the Flatbed Glass (see [Placing the Originals](#)).
2. Click a scan-to function from the iDocScan Touch panel to start scanning to the destination with the Settings you previously configured (see [Setting iDocScan Touch and Buttons](#)).

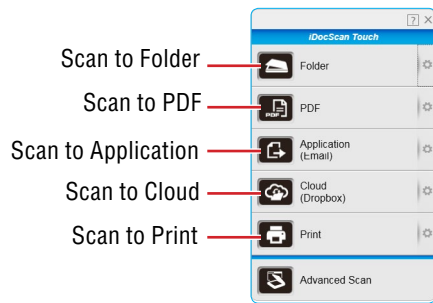

Alternatively, you can press a button on the Scanner to start scanning to the destination.

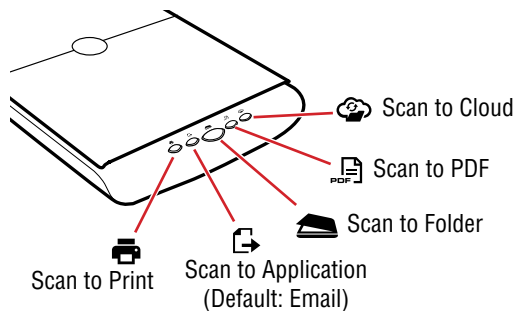

 The "Processing..." bar appears showing the current scan status.

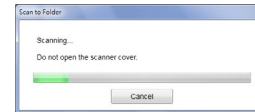

3. After scanning completes, the scanned image is saved and opened according to the scan-to function you select as below:

Scan to Folder

The specified folder opens automatically with the scanned image selected in it.

Scan to PDF

The scanned image is saved in the PDF format and opened automatically in the Acrobat Reader.

Scan to Application

The scanned image opens automatically in the specified application (default: Email). The default email application opens up with the scanned image attached in a blank email.

If you set the Application Settings to "Open with Application", the scanned image opens automatically in the specified application (default: MS Paint).

NOTE

- Maximum of 20 files can be attached within an email.
- If the total file size is exceeded the attachment size limit set at the mail server, the file cannot be sent.

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

- Applications that do not support multi-page scanning will open and display only the first page of the originals.
- If the application cannot support the File Type selected, an error message will appear. Refer to the instructions of the application for the formats supported.

Scan to Cloud

The scanned image opens automatically in the specified cloud folder (default: Dropbox). You can specify either Google Drive or Dropbox in the Settings.

NOTE: To use this function, you must have a Dropbox and a Google Drive account. Dropbox and Google Drive must be installed on your computer and has been logged in prior to scanning.


Scan to Print

The computer's print dialog box opens up with the image in it. Use the print dialog box to set the available settings of the printer driver to print the scanned image.

Setting iDocScan Touch (Advanced Scan)

The Advanced Scan is only available by using the iDocScan Touch panel. It includes a Preview Window with controls and tools. You can preview the image after you make any changes in the Settings window.


Click Advanced Scan to open the Settings dialog box.

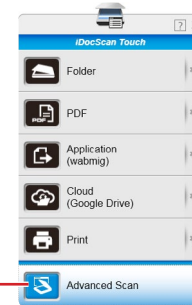



Advanced Scan

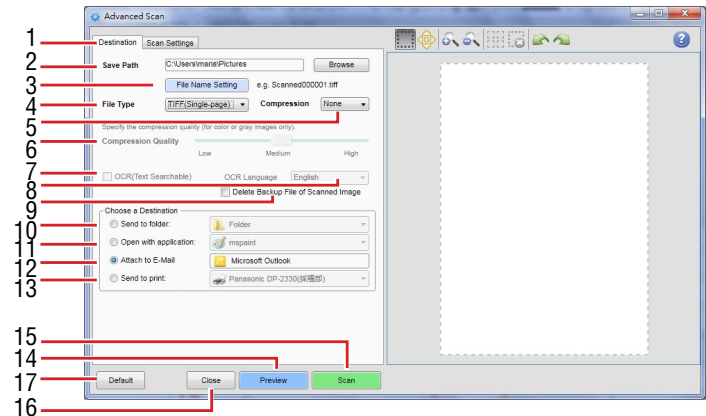

The Settings window appears. You can change the settings as following in the **Destination** and **Scan Settings** tabs:

Destination Tab


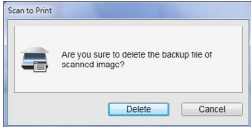




SCANNING PROCEDURES IN WINDOWS (CONTINUED)

1	Destination Tab	Click the Destination tab to display the settings options.
2	Save Path	<p>Indicates the folder where image files are saved. Click Browse to specify a file folder to save the scanned image.</p>  NOTE <ul style="list-style-type: none"> You cannot specify folders where root privileges are required.
3	File Name Setting	The filename can be created with a prefix in the Prefix field up to 20 characters, i.e. Scanned000001.jpg.
4	File Type	<p>Select a file format to save scanned image with following choices: “JPEG”, “BMP”, “TIFF (Single-page)”, “TIFF (Multi-page)”, “PDF (Single-page)”, “PDF (Multi-page)”</p>  NOTE <ul style="list-style-type: none"> PDF (Single-page) and TIFF (Single-page) are used for splitting the multi-page originals into single files. PDF (Multi-page) and TIFF (Multi-page) are used for combining multiple originals into one file.

5	Compression	<p>When TIFF file is selected in the File Type, the Compression format is enabled with following choices:</p> <ul style="list-style-type: none"> None: No compression is used. LZW: LZW is a compression method that results in no loss of data. The file size is closer to the actual size of the color data. JPEG: JPEG is a lossy compression method that results in some data is lost. This method is best used to reduce the large file size.  NOTE <ul style="list-style-type: none"> The Compression is only available in the Color and Gray mode. TIFF (JPEG compression) is enabled up to 600 dpi. This option to compress 1200 dpi is not available.
6	Compression Quality slider	<p>When JPEG, PDF or TIFF (Compression: JPEG) file is selected in the File Type, the Compression Quality slider is enabled. Use the slider to compress a file to reduce the total size in High, Medium, or Low. The higher the compression level, the lower the file size, and vice versa.</p>  NOTE <p>The Compression Quality is only available in the Color and Gray mode.</p>

SCANNING PROCEDURES IN WINDOWS (CONTINUED)


7	OCR (Text Searchable)	<p>This function is checked by default when selecting PDF (Multi-page) and PDF (Single-page) file in the File Type. It can recognize and convert your scanned image into a text based file that can be searched and edited.</p> <p> NOTE</p> <ul style="list-style-type: none"> • The function is not available when “Scan Resolution’ is set to 100 dpi. • It is recommended to use 300 dpi resolution for the OCR function.
8	OCR Language	<p>This function is enabled when OCR (Text Searchable) is selected.</p> <p>Ensure to select the correct language of the original text from the drop-down menu to perform text recognition.</p>
9	Delete Backup File of Scanned Image	<p>This function is enabled when Scan to Application (Email) or Scan to Print is selected.</p> <p>This will trigger the delete backup file dialog box after the scanning process completes, asking if you want to delete the backup file. Click “Delete” to delete the backup file. Click “Cancel” not to delete the file.</p> 

10	Scan to Folder	<p>Select "Scan to Folder" as the destination of your scan.</p>
11	Open with Application	<p>Select "Open with Application (default: MS Paint)" as the destination of your scan.</p> <p>To add a new application, click Add... from the dropdown menu. Click Add to navigate to the .exe files in the Program folder, then select it to add in the application list.</p> <p>To delete the application, select it from the dropdown menu, then click Delete to remove the application.</p> <p> NOTE</p> <ul style="list-style-type: none"> • Please make sure the application supports the File Type selected. • The default application (MS Paint) cannot be deleted.
12	Attach to Email	<p>Select "Attach to E-Mail" as the destination of your scan.</p> <p>The system detects and displays the default email client (e.g. Outlook) on your computer.</p> <p> NOTE</p> <p>Make sure an email account has been configured.</p>

SCANNING PROCEDURES IN WINDOWS (CONTINUED)





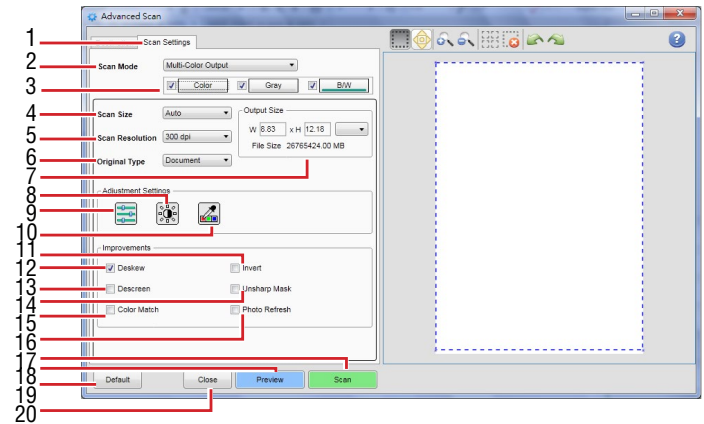

13	Sent to Print	Select "Send to Print" as the destination of your scan. Select an available printer from the dropdown menu as the destination of your scan. The system can detect and display the default printer which is connected to your computer.
14	Preview	Click to preview the image using the current settings.
15	Scan	Click to scan the final image using the current settings.
16	Close	Click to save the settings you changed and close the Settings window.
17	Default	Reset Destination and Scan Settings to the default settings.

Scan Settings Tab

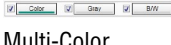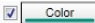

1	Scan Settings Tab	Click the Scan Settings tab to display the settings options.
2	Scan Mode	<ul style="list-style-type: none"> • Color: Select it to scan the color photographs, documents, and items containing colors in full color. • Gray: Select it to scan the image in grayscale using varying shades of gray. • B/W: Select it to scan black and white documents or photos, and render the image in black and white color. • Multi-Color Output: Select it to enable the Multi-Color Output controls.

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

<p>3</p>	<p>Multi-Color Output Controls</p> 	<p>Tick the checkbox to select the modes including: “Color”, “Gray”, “B/W”. You can make a single scan to be saved up to 3 separate images simultaneously.</p> <p>Press the “Color”, “Gray”, or “B/W” button to change the settings for each mode. A thick line will appear on the button pressed (i.e., ). You can set different settings for each mode to be scanned.</p>  <p>Original One scan into 3 images</p>
<p>4</p>	<p>Scan Size</p>  NOTE	<p>Select the output size of the image to be scanned with the following choices: “Custom”, “A4”, “B5”, “Letter”.</p> <ul style="list-style-type: none"> • Select “Custom” to automatically detect the paper size and crop scanned image. When scanning darker originals (i.e. night scenery photos), over-cropping may occur. • Select “Custom” to specify a custom page size by resizing the cropping frame in the Preview Window.
<p>5</p>	<p>Scan Resolution</p>	<p>Select the resolution of the image to be scanned with following choices: “100dpi”, “200dpi”, “300dpi”, “600dpi”, “1200dpi”, “2400dpi”, “4800dpi”.</p> <ul style="list-style-type: none"> • The higher the resolution, the bigger the file size. • “100dpi” is disabled when “OCR (Text Searchable)” is checked.  NOTE <p>The change of Scan Resolution will apply to the selected cropping frame only.</p>
<p>6</p>	<p>Original Type</p>  NOTE	<p>Select an option according to the type of original to auto-adjust overall brightness and contrast for the scanned image.</p> <ul style="list-style-type: none"> • Document: Originals with mainly text. • Photo: Originals with mainly color pictures. • Magazine: Originals with both text and color pictures. <p>Press the Preview button to update the preview image with the change made in the Original Type.</p>
<p>7</p>	<p>Output Size</p>	<p>Display the width and height of the cropping frame. You can adjust the output size by dragging the edges or corners of the cropping frame in the Preview Window.</p>

 
SCANNING PROCEDURES IN WINDOWS (CONTINUED)

8




(Brightness/
Contrast)

Brightness: use the slider to increase or decrease the value (-127 ~ +127) and to adjust the image brighter or darker.
Example:

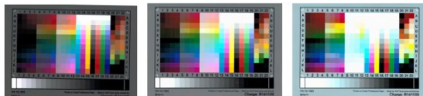

Brightness: -50 Brightness: 0 Brightness: +50

 Contrast: use the slider to increase or decrease the value (-127 ~ +127) to adjust the contrast higher or lower. The bigger the value is to set towards +127, the more contrast is between lighter and darker areas.
Example:

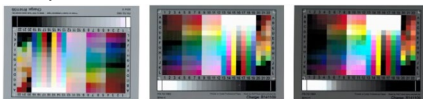

Contrast: -50 Contrast: 0 Contrast: +50



NOTE
Brightness/Contrast is enabled in “Color” and “Gray” mode only.


9



(B/W Conversion
Settings)

This function is only available when scanning in B/W, or Multi-color Output (B/W) mode. You can convert the scanned image in black and white using following method:

Auto Threshold: It finds an adequate threshold value automatically to obtain a clear image and remove dark backgrounds from the image.

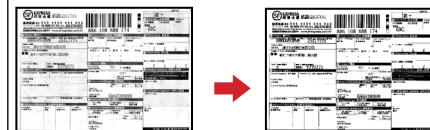

Original

After processed

Manual Threshold: You may manually adjust the Threshold value (-127 ~ +127) until you are satisfied with the result.

Halftone: This provide 5 halftone patterns, each creates a halftone effect using a pattern of black and white dots that can represent darker or lighter color values. Check the **Advanced** to enable the **Edge Refinement** value (-127~+127) if you want to increase or decrease the edge weight of patterns.



Original



After processed

SCANNING PROCEDURES IN WINDOWS (CONTINUED)


10



(Color Dropout)

This setting removes a single color (Red, Green or Blue) such as marks, stamps and retains the black text. If “None” is selected, No color is dropped out.

Example of removing the red stamp:

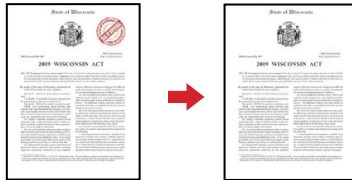

Original

Color Dropout applied

Check the **Advanced** checkbox to activate the **Filter Threshold** slider when the color selected cannot drop out. Drag the slider toward “Maximum” to remove more selected color, and toward “Minimum” to keep more selected color in.



NOTE


- Color Dropout can only be specified in “Gray” and “B/W” mode.
- Color Dropout may not remove all of the contents for the selected color when scanning colored backgrounds, or colored paper.

11

Invert

This function reverses the colors of the scanned image to the opposite colors.


Example of black text with white background to be inverted:

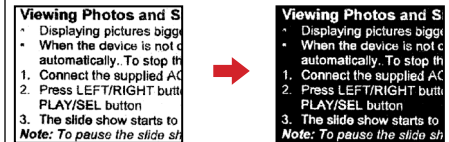

Original

Invert applied

Example of grayscale picture to be inverted:

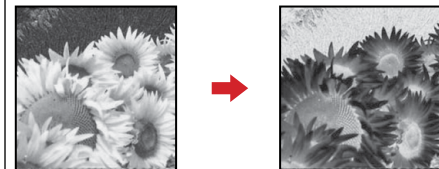

Original

Invert applied

Example of colored picture to be inverted:




Original

Invert applied

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

12 Deskew

Correct the skew image approximately +/-15 degrees. (The results of Deskew do not appear in the preview image, only in the scanned image.)

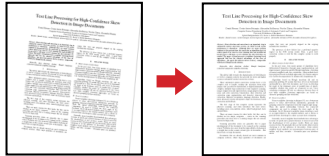

Original

Deskew applied

- Deskew is enabled when the Scan Size set to "Custom".
- Originals with darker backgrounds and dark text are difficult to deskew. Deskew may not work properly when deskewing dark images.
- This function cannot work with a large skew angle.

13 Descreen

Descreening helps to reduce moire patterns in magazines or other printed materials. After descreening, the image may appear blurry.

Example:



Original



Descreen applied



NOTE

- If the Unsharp Mask function is enabled, some moire pattern may not reduce even when the Descreen is enabled. In such cases, disable the Unsharp Mask.
- Scanning takes longer than usual when you enable the Descreen function.

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

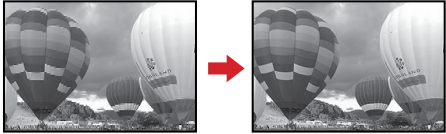14	Unsharp Mask	<p>This function helps to emphasize edges in the image more clearly for an overall sharper image.</p> <p>Example:</p> <div style="text-align: center;">  </div> <p style="text-align: center;">Original Unsharp Mask applied</p> <p> NOTE</p> <ul style="list-style-type: none"> • The Unsharp Mask may not work properly for poorly focused or out of focus images. • You are recommended to disable the Unsharp Mask when the moire is not being reduced even with the Descreen enabled.
15	Color Match	<p>This function helps to more accurately reflect the actual colors of the original image.</p> <ul style="list-style-type: none"> • Color Match is only enabled when the Scan Mode set to “Color”.
16	Photo Refresh	<p>This function helps to automatically lighten and sharpen the scanned image.</p> <ul style="list-style-type: none"> • Photo Refresh is only enabled when the Scan Mode set to “Color”.


17	Scan	Click to scan the final image using the current settings.
18	Preview	Click to preview the image using the current settings.
19	Close	Click to save the settings you changed and to close the Settings window.
20	Default	Reset Destination and Scan Settings to the default settings.


SCANNING PROCEDURES IN WINDOWS (CONTINUED)


Scanning in Advanced Scan Mode


The Advanced Scan mode includes a Preview Window allowing you to preview the image before scanning the final image.


1. Place the original on the Flatbed Glass (see [Placing the Originals](#)).
2. Click on the **Preview** button to prescan and preview your original. A quick, low-resolution preview of your original will be made and appear in the Preview Window.

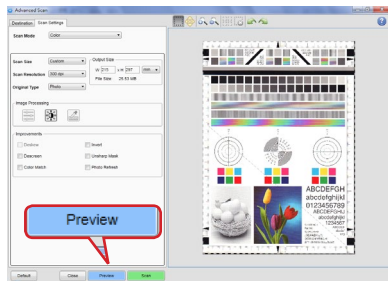

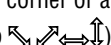
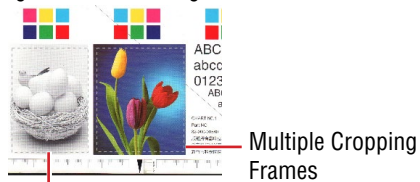
3. Adjust or add the cropping frames as following methods.
 - Move the cursor to a corner or an edge of the crop frame (the cursor will change to ). Click and drag the cursor to enlarge or shrink the cropping frame to the desired size.

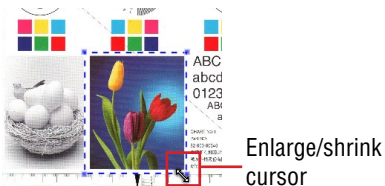

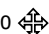- Move the cursor within the cropping frame (the cursor will change to ). Click and drag the cursor to move the entire cropping frame to the desired area.

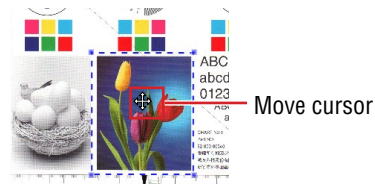

- If more than one originals are placed on the Flatbed, all images will be contained in one cropping frame. click the  in the Preview toolbar to adjust the frame size and add another cropping frame to the image.



4. You can make changes in the Settings as necessary. Your changes are automatically reflected in the Preview Window.




NOTE


- The Deskew function cannot show in the Preview Window, and the results can only be seen after scanning.
- The change of Scan Resolution you made will apply to the selected cropping frame only, and the change of the other settings will apply to the selected and unselected cropping frames.

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

- When you are satisfied with the results, click the **Scan** button to start scanning with the settings.

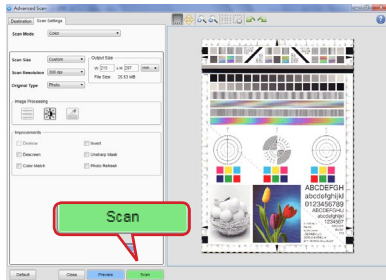

The “Processing...” bar appears showing the current scan status.

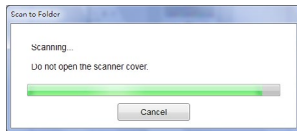

- After scanning completes, the scanned image is saved and opened according to the Choose a Destination you select.

• Scan to folder

The specified folder opens automatically with the scanned image selected in it.

• Open with application

The scanned image opens automatically in the specified application (default: MSPaint).



NOTE

If the application cannot support to open the File Type, an error message may appear. The scanned image is saved, but cannot be opened.

• Attach to E-Mail

The scanned image opens automatically in the default email application. The default email application opens up with the scanned image attached in a blank email.



NOTE

- Maximum of 20 files can be attached within an email.
- If the total file size is exceeded the attachment size limit set at the mail server, the file cannot be sent.
- Applications that do not support multi-page scanning will open and display only the first page of the originals.
- If the application cannot support the File Type selected, an error message will appear. Refer to the instructions of the application for the formats supported.


• Sent to Print

The computer's print dialog box opens up with the image in it. Use the print dialog box to set the available settings of the printer driver to print the scanned image.

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

Preview Window Controls

There are several useful tools in the Preview toolbar to assist you to check the details of the preview image.

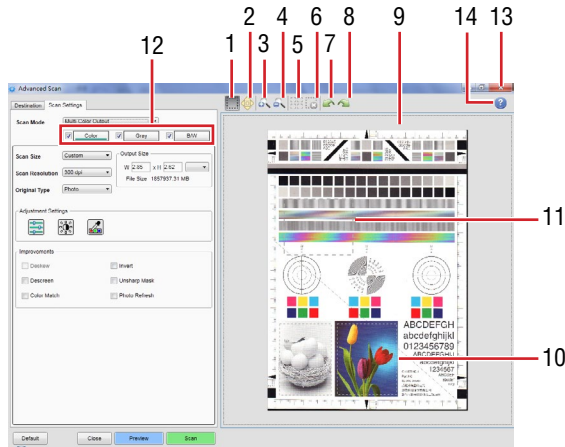


1		Create a new cropping frame in the Preview Area. You can create maximum 12 cropping frames in the Preview Area.
2		Click and drag to move the image when zoomed in.
3		Zoom in on the image. The image will be enlarged every time you click it.
4		Zoom out on the image. The image will reduce every time you click it.

5		Select all cropping frames. This is available when two or more cropping frames are created. All frames turns into thick dashed lines, which allows you to change the Scan Resolution to all cropping frames.
6		Delete the selected cropping frame(s).
7		Rotate the image 90° counterclockwise.
8		Rotate the image 90° clockwise.
9	Preview Area	Display the preview image.
10	Thin dashed lines	Represent the unselected cropping frame.
11	Moving thick dashed lines	Represent the currently selected cropping frame. You can enlarge or shrink the cropping frame by dragging the corners or edges of the cropping frame. <i>The change of Scan Resolution you made will apply to the selected cropping frame only.</i>
12	Multi-color output controls	Click the “Color”, “Gray”, or “B/W” button to view the preview image in the Preview Window in color, grayscale, or black and white. A thick line will appear on the button pressed (i.e., <input checked="" type="checkbox"/> Color).
13		Close the Advanced Scan window.
14		Display the preview help information.

SCANNING PROCEDURES IN WINDOWS (CONTINUED)

Continue to Scan More Pages

 When “Continuous Scanning” is checked in the Setting, a dialog box appears after the previous scan finishes, asking if you want to scan the next document.

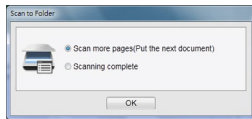


To continue the next scan, place the next original on the Scanner's Flatbed Glass. Select “Scan more pages (put the next document)”, then click **OK**.

To finish the scan, select “Scanning complete”, and then click **OK**. The scanned image will be sent to the destination selected.

Delete the Backup Files

When “Delete Backup File of Scanned Image” is checked in the Settings, a dialog box appears after the scanning to Email application or printer, asking if you want to delete the scanned image.

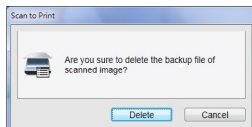


To confirm the deletion, click **Delete**.


To keep the scanned image without deletion, click **Cancel**.

Cancel a Scan


To stop the scanning process, click **Cancel** during scanning.

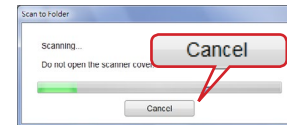

A “Scan has been cancelled.” dialog box appears and the scanned image is cancelled. Click **OK** to close the dialog box.

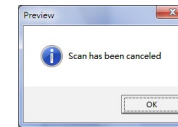


If you cancel a scan during the continuous scanning process, the following cancel dialog box appears, asking if you want to save the image already scanned before cancelling the scan. Click **Yes** to save the file, otherwise click **No** to discard the file.

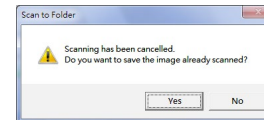

SCANNING PROCEDURES IN MAC


Setting ScanMust and Buttons

You can setup the scanner buttons to perform certain actions within the ScanMust software.

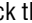1. Click the Scanner icon [] in the menu bar of your computer to bring up the ScanMust menu.



2. Click **Settings...** in the ScanMust menu.

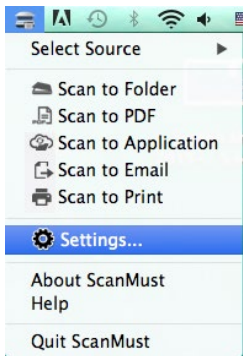


The Settings window appears, in which you can change settings for each Scan-to function in the **Destination** and **Scan Settings** tabs.


Destination

Click the **Destination** tab to bring up the setting page for the Scan-to option selected. You can make change as following:


Scan to Folder

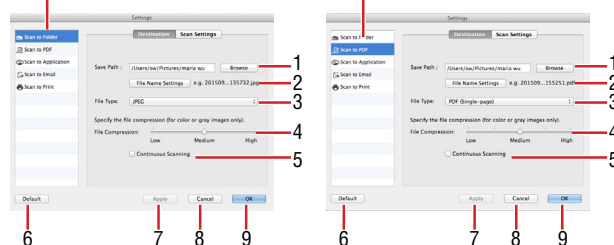


Scan to PDF

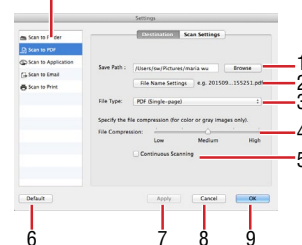


Scan to Application

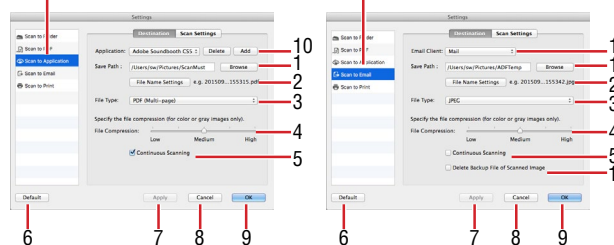

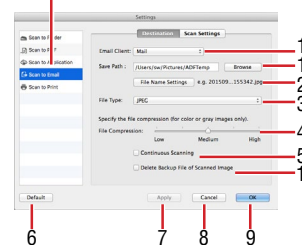


Scan to Email



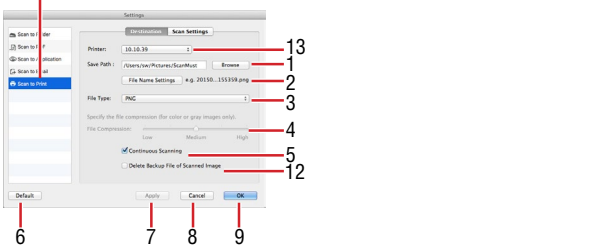



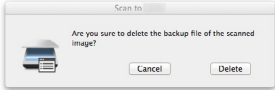
Scan to Print



SCANNING PROCEDURES IN MAC (CONTINUED)

1	Save Path	<p>Indicates the folder where image files are saved. Click Browse to specify a file folder to save the scanned image.</p> <p> NOTE</p> <ul style="list-style-type: none"> You cannot specify folders where root privileges are required. Save Path cannot reset to the default folder once changed.
2	File Name Settings	<p>You can create a filename format for the scanned image with either one of this setting.</p> <ul style="list-style-type: none"> yyyyMMddHHmmss: The filename is created in the “yyyyMMddHHmmss” format, i.e. 20150811-154649.jpg. Custom: The filename is created with a prefix specified in the File Name, i.e. Scanned000001.jpg
3	File Type	<p>Select a file format to save scanned image. Availability of the File Type may vary in different scan-to destination.</p> <p>Choices: “JPEG”, “TIFF (Single-page)”, “TIFF (Multi-page)”, “PDF (Single-page)”, “PDF (Multi-page)”, “PNG”</p> <p> NOTE</p> <ul style="list-style-type: none"> PDF (Single-page) and TIFF (Single-page) are used for saving originals into single page PDF and TIFF files. PDF (Multi-page) and TIFF (Multi-page) are used for combining multiple scans into one file. The “Continuous Scanning” dialog will be triggered automatically for scanning more page. JPEG is not available for “B&W” images.
4	File Compression	<p>Move the slider to compress and reduce the JPEG or PDF file size into a smaller size. The higher the compression, the lower the file size, and vice versa.</p> <p> NOTE</p> <p>The File Compression is only available in the Color and Gray mode.</p>

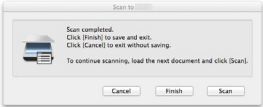
SCANNING PROCEDURES IN MAC (CONTINUED)


5	Continuous Scanning	<p>Check this option to trigger the continuous scanning dialog box after the current page is scanned, allowing you to continue scanning for more pages. (See Continue to Scan More Pages)</p>  <p>The dialog box is titled "Scan to" and contains the text: "Scan completed. Click [Finish] to save and exit. Click [Cancel] to exit without saving. To continue scanning, load the next document and click [Scan]." It has three buttons: "Cancel", "Finish", and "Scan".</p>	<p>10 Application</p> <p>The system detects and displays the applications installed in your computer which support to open the File Type.</p> <p>To add a new application, click Add and navigate to the .exe files in the Application's folder, then click "Add" to add it to the application list. To delete the application, select the application, then click Delete.</p>
6	Default	<p>Reset both Destination and Scan Settings to the default for the currently selected scan-to function.</p>	<p> NOTE</p> <p>Make sure to add the application which can open the File Type.</p>
7	Apply	<p>Apply the selected scan-to function with the settings you changed.</p> <p> NOTE</p> <p>If you did not apply the changes to the currently selected scan-to function, and then select another scan-to function, the following setting change dialog box appears asking if you want to save the changes.</p>  <p>The dialog box is titled "Scan to Folder" and contains the text: "The settings have been changed. Do you want to save the changes?" It has two buttons: "No" and "Yes".</p>	<p>11 Email Client</p> <p>The system detects and displays the default email client using either Mail or Outlook that has been installed on your computer.</p> <p>NOTE: Make sure an email account has been configured properly.</p>
8	Cancel	<p>Cancel the changes and close the Settings window.</p>	<p>12 Delete Backup File of Scanned Image</p> <p>Check this option to trigger the delete backup file dialog box after the scanning process completes, asking if you want to delete the backup file (See Delete the Backup Files).</p>  <p>The dialog box is titled "Scan to" and contains the text: "Are you sure to delete the backup file of the scanned image?" It has two buttons: "Cancel" and "Delete".</p>
9	OK	<p>Apply the selected scan-to function with the settings you changed and close the Settings window.</p>	<p>13 Printer</p> <p>The system detects and displays the default printer which is connected to your computer.</p>



SCANNING PROCEDURES IN MAC (CONTINUED)

Scan Settings

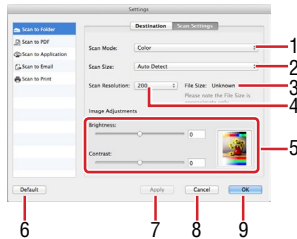

Click the **Scan Settings** tab to bring up the setting page for the Scan-to option selected. You can make change as following:



1	Scan Mode	<p>Choices: “Color”, “Gray”, “B&W”</p> <ul style="list-style-type: none"> • Select “Color” to scan the color photographs, documents, and items containing colors in full color. • Select “Gray” to scan the image in grayscale using varying shades of gray. • Select “B&W” to scan text-only originals or line drawings.
2	Scan Size	<p>Select the output size of the image to be scanned.</p> <p>Choices: “Auto Detect”, “A4(210x297mm)”, “B5(176x250mm)”, “Letter(216x279mm)”</p> <p> NOTE</p> <p>Select “Auto Detect” to automatically detect the paper size and crop the image. When scanning darker originals, over-cropping may occur.</p>


3	File Size	<p>The File Size is calculated based on the Scan Size and Scan Resolution you select. The File Size given here is only an estimate. The actual file size can be different than the estimate.</p>
4	Scan Resolution	<p>Select the resolution of the image to be scanned.</p> <p>Choices : “100”, “200”, “300”, “600”, “1200”</p> <p> NOTE</p> <p>The higher the resolution, the bigger the file size.</p>
5	Image Adjustments	<p>Brightness: Use the slider to increase or decrease the value (-100 ~ +100) and to adjust the image brighter or darker. You can view the test image to the right side of the slider for the result of the value.</p> <p>Contrast: Use the slider to increase or decrease the value (-100 ~ +100) and to adjust the contrast higher or lower. The bigger the value is to set towards +100, the more contrast is between lighter and darker areas. You can view the test image to the right side of the slider for the result of the value.</p> <p> NOTE</p> <p>Brightness/Contrast is enabled in “Color” and “Gray” mode, but not in the B/W mode.</p>
6	Default	<p>Reset both Destination and Scan Settings to the default for the currently selected scan-to function.</p>

SCANNING PROCEDURES IN MAC (CONTINUED)


7	Apply	<p>Apply the selected scan-to function with the settings you changed.</p> <p> NOTE</p> <p>If you did not apply the changes to the currently selected scan-to function, and then select another scan-to function, the following setting change dialog box appears asking if you want to save the changes.</p> 
8	Cancel	Cancel the changes and close the Settings window.
9	OK	Apply the selected scan-to function with the settings you changed and close the Settings window.

Scanning Using ScanMust and Buttons

1. Place the original on the Flatbed Glass (see [Placing the Originals](#)).
2. Click a scan-to function from the ScanMust menu to start scanning to the destination with the Settings you previously configured (see [Setting ScanMust and Buttons](#)).

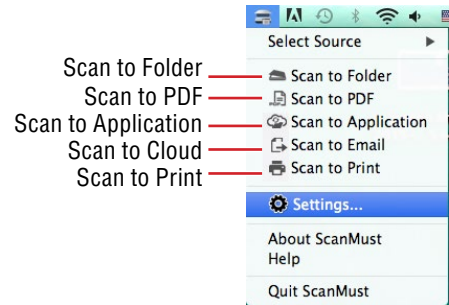


Alternatively, you can press a button on the Scanner to start scanning to the destination.

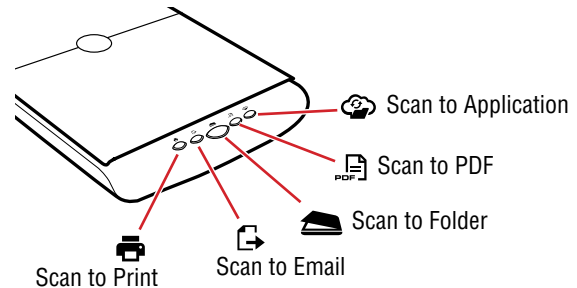

SCANNING PROCEDURES IN MAC (CONTINUED)

The “Processing...” bar appears showing the current scan status.

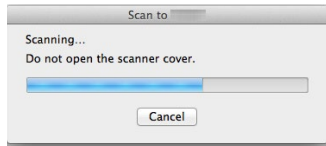

- After scanning completes, the scanned image is saved and opened according to the scan-to function you select.

Scan to Folder

The specified folder opens automatically with the scanned image selected in it.

Scan to PDF

The scanned image is saved in the PDF format and opened automatically in the Acrobat Reader.

Scan to Application

The scanned image opens automatically in the specified application (default: Preview).

NOTE

If the application cannot support to open the File Type, an error message will appear. The scanned image is saved, but cannot be opened.

Scan to Email

The default email application opens automatically with the scanned image attached in a blank email. Use the send email method of the email application to send the scanned image.

NOTE


- If the file size of the scanned image exceeds the attachment size limit set at your mail server, then the image cannot be sent.
- Scan to Email only supports Apple Mail and MS Outlook as Email clients.

Scan to Print

Your computer's print dialog box opens automatically. Use the print dialog box to set the available settings of the printer driver to print the scanned image.

Continue to Scan More Pages

When “[Continuous Scanning](#)” is checked in the **Destination** tab, a dialog box appears after the previous scan finishes asking if you want to scan the next document.

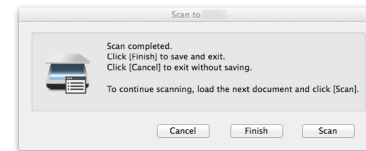

SCANNING PROCEDURES IN MAC (CONTINUED)


To continue the next scan, place the next original on the scanner, then click **Scan**.

To finish the scan, click **Finish** to complete the scanning process. The scanned image will be saved to the folder specified in the **Destination** tab.


To cancel the scan without saving, click **Cancel**.

Cancel a Scan


To stop the scanning process, click **Cancel** during scanning.

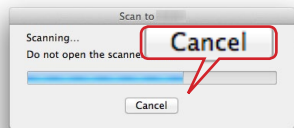

 A “Scanning has been cancelled” dialog box appears and the scanned image is cancelled. Click **OK** to close the dialog box.

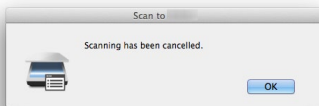


If you cancel a scan during the continuous scanning process, the following cancel dialog box appears, asking if you want to save the image already scanned before cancelling the scan. Click **Yes** to save the file, otherwise click **No** to discard the file.

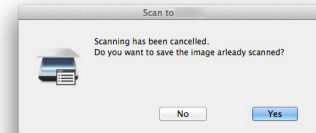

Delete the Backup Files

When “[Delete Backup File of Scanned Image](#)” is checked in the Settings, a dialog box appears after the scanning to Email application or printer, asking if you want to delete the scanned image.

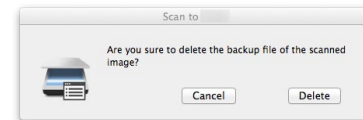

To confirm the deletion, click **Delete**.

To keep the scanned image without deletion, click **Cancel**.


SCANNING USING TWAIN INTERFACE IN WINDOWS

Acquire the Scanner TWAIN Interface

The TWAIN driver is the scanning module provided with your scanner. It is easily accessed from within the bundled scanner software or from within any TWAIN-compliant program, such as Medialmpression, Photoshop. Before you start with the steps below, be sure you have installed and configured the bundled scanner software from the DVD included.

Following is an example of using Medialmpression.

1. Launch Medialmpression, and then click “Pictures” in the start screen.
2. Click on Import icon, and then select “Acquire”.

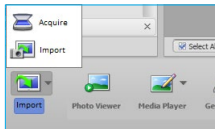


3. Under the Select the device, select “PageExpress 4800 Pro”, then click “Acquire” to open the TWAIN interface.



NOTE

In some programs, the Acquire command will appear in a submenu under the Import command.

Select "PageExpress 4800 Pro"

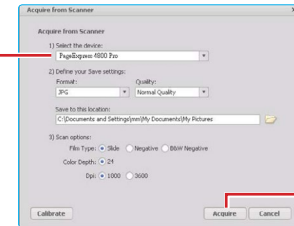

Acquire

The TWAIN interface appears as following.




The TWAIN interface contains control settings, which you must set prior to scanning a document. The basic steps to scan a document are:

1. Click on the **Preview** button to prescan and preview your original.
2. Set the desired image area to be scanned.
3. Select the scan source.
4. Select the scan mode.
5. Select the resolution.
6. Click on the **Scan** button.

SCANNING USING TWAIN INTERFACE IN WINDOWS (CONTINUED)

The TWAIN Interface

The TWAIN interface is divided into two sections: the left section where most of the control settings are located, and the right section, which is the Preview Area.

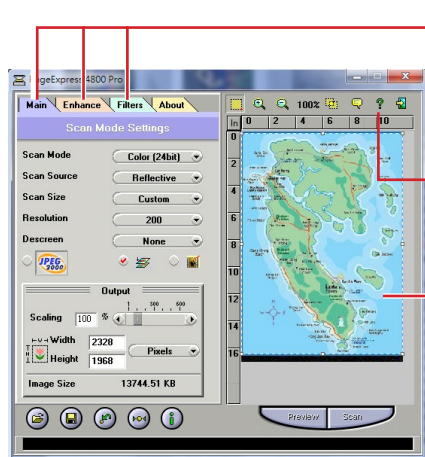

Settings Tabs

Contain different control settings, including Main, Enhance, and Filters. **Help**

Click to open the detailed instructions of TWAIN dialog box.

Preview Area

Used for viewing the prescan image.



NOTE

For the detailed instructions of TWAIN dialog box, please click “?” (Help) on the TWAIN interface to open the Help file.

The Main Tab

Scan Mode

Determines how the scanner will read the image and refers to how the image will be reproduced after it is scanned.

Scan Source

Sets the media type of the document to be scanned.

Scan Size

Refers to the size of the image or document that you are about to scan.

JPEG2000 Scan



The latest image compression standard that usually provides smaller file size and higher image quality than the original JPEG.

Width and Length


Show the dimensions of the image area inside the Cropping Frame.

Picture Dithering

Converts lineart image into a series of dots with different densities to represent the image. This function is available in B/W mode.

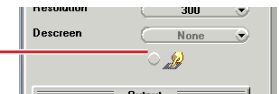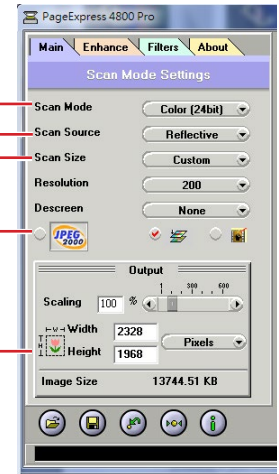 

SCANNING USING TWAIN INTERFACE IN WINDOWS (CONTINUED)

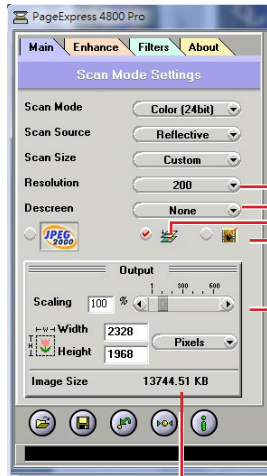

Resolution

Sets the resolution in dots per inch (dpi).

Descreen

Sets the media type of the document to be scanned to reduce image noise.

Color Matching Control

Color Matching allows the scanner to more accurately reflect the actual colors of the original image.

Photo Refresh

Enables to automatically lighten and sharpen the scanned image. This function is applicable when you are scanning images in Color 24bit.

Output Scaling

Changes the dimensions of the final output.

Image Size

Displays the amount of computer space needed to display or save the selected image area.

Whiten Background

Removes the unpleasant background shade. This function is available in Gray mode.



The Enhance Tab

Brightness/Contrast Control

Brightness/Contrast Control

Thumbnails

Are used to see the effects of any changes in the control settings.

Channel Selector Control

Allows you to select the channel layers (red, green and blue) that make up a color image. You can choose to change the channels individually or choose master to change all channels equally and simultaneously.

Brightness Control


Allows you to adjust the overall amount of light in the image through a range of values (-127~0~+127).

Contrast Control

The Contrast Control allows you to adjust the overall amount of black areas or white areas in the image through a range of values (-127~0~+127).

Preview Button

This button allows you to see the effect of any changes made to the image.

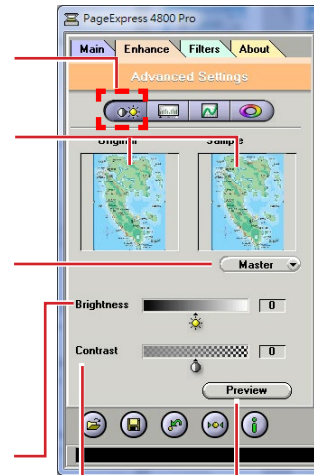

SCANNING USING TWAIN INTERFACE IN WINDOWS (CONTINUED)

Level Control

Level Control Thumbnails

Are used to see the effects of any changes in the control settings.

Channel Selector Control

Allows you to select the channel layers (red, green and blue) that make up a color image. You can choose to change the channels individually or choose master to change all channels equally and simultaneously.

Histogram

Shows the distribution of the brightness levels in the image.

Level Control


Use the level slider to adjust an image's contrast and brightness.

Eyedropper tools

Eyedroppers are used to identify an image's highlights and shadows.

Preview Button

This button allows you to see the effect of any changes made to the image.

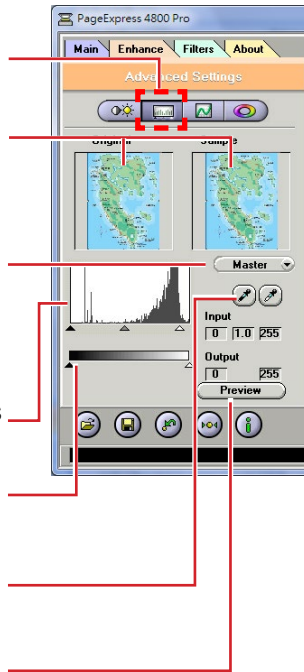

Curve Control

Curve Control Thumbnails

Are used to see the effects of any changes in the control settings.

Channel Selector Control

Allows you to select the channel layers (red, green and blue) that make up a color image. You can choose to change the channels individually or choose master to change all channels equally and simultaneously.

Curve Control

Applying a curve to an image enhances favored brightness ranges at the cost of others.

Add Anchor


To make a curve, simply place an anchor on the diagonal line and adjust its position. Add more anchors if you have to make a more complex curve.

Remove Anchor

You can also remove anchors.

Preview Button

This button allows you to see the effect of any changes made to the image.

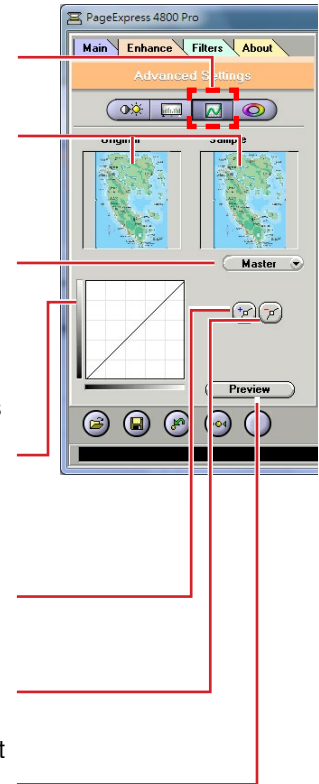

SCANNING USING TWAIN INTERFACE IN WINDOWS (CONTINUED)

Hue/Saturation Control

Hue/Saturation Control Thumbnails

Are used to see the effects of any changes in the control settings.

Channel Selector Control

Allows you to select the channel layers (red, green and blue) that make up a color image. You can choose to change the channels individually or choose master to change all channels equally and simultaneously.

Hue Slider


is composed of two color bars. The upper one is static and the lower one movable. Slide the latter, and you will see the image shift its overall coloring.

Saturation Slider

Lets you adjust an image's color purity.

Preview Button

This button allows you to see the effect of any changes made to the image.

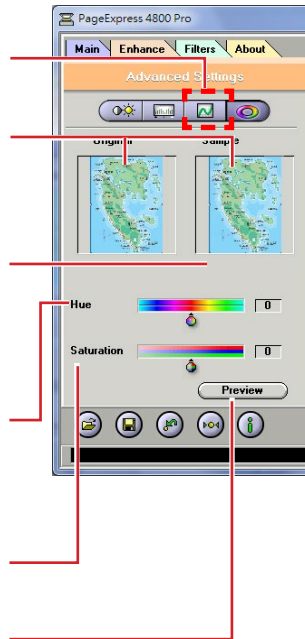

The Filters Tab

The Filters Tab allows you to adjust the individual effects of the scanned image by applying various filters to the image, prior to scanning.

Thumbnails

Are used to see the effects of any changes in the control settings.

Filter Control Buttons

Use these buttons to add /subtract a degree of the Blur or Sharpen filter.

None

No filter is applied.

Blur

Smooths or softens the image.

Sharpen

Enhances the detail in the image.

Invert

Reverses an image to its negative or compliment.

Flip


Creates a mirror image of the original.

Emboss

Makes the elements in the image appear raised or sunken.

Unsharp Mask

Emphasizes shape edges and color boundaries.

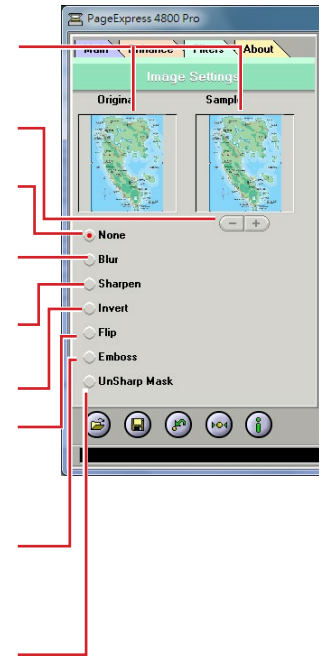

SCANNING USING TWAIN INTERFACE IN WINDOWS (CONTINUED)

The Preview Window and Controls

Cropping Tool

Selects the area in the Preview Window that will be used as the final scan.

Zoom Tool Button

Allows you to enlarge/shrink an area of the image in the Preview Window.

Crop Frame

Outlines the scan area or region that will be included in the final scan.

Preview Button

Allows you to see the effect of any changes made to the image.

Load Button

Loads previously saved image settings.

Save Button

Saves the current image settings.

Previous Button


Returns the most recent selection to its previous setting. (Reloads the last saved image settings.)

Info Button

Lists information about the current settings being used.

Reset Button

Returns settings to their default values.

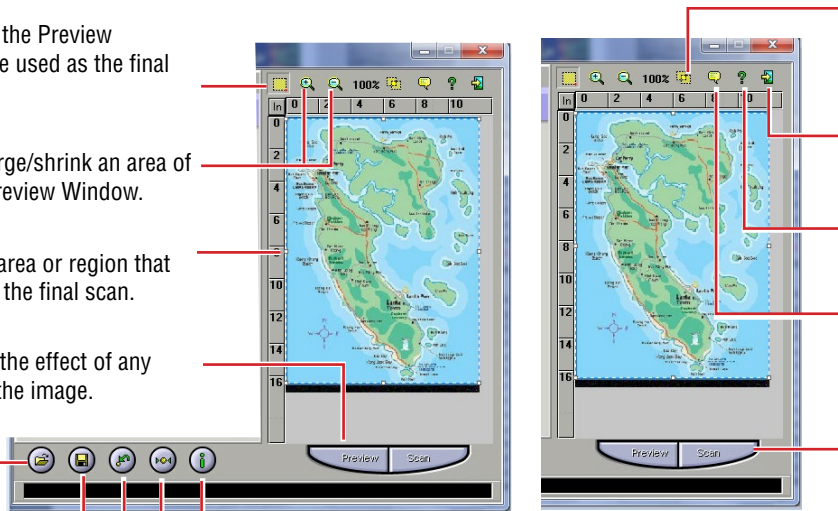

Batch Scan Button

Allows creation of up to 30 scan regions (or Crop Frames) for multiple scanning.

Language Setting

Allows you to select the desired language that the dialog box will be displayed in.

Help Button

Provides On-line Help.

Exit Button

Click to exit (or close) the TWAIN or Batch Scan Dialog boxes.

Scan Button

processes the pre-scanned image, and displays it in the host software (where you opened up the TWAIN dialog box).

SCANNING USING TWAIN INTERFACE IN WINDOWS (CONTINUED)

Prescan the Image

A Preview is a quick low-resolution scan of the entire original image. From this low-resolution scan you can get a clearer idea of the image area you want to include when you click Scan.



To Preview, the steps are:

1. Place the document face down on the scan window glass.
2. Click the Preview button in the dialog box. After the scanner has scanned the document, the scanned image will appear in the Preview Window. From the preview image, you can now set the exact image area you wish to include in your final scan.

Set Up the Scan Parameters

1. **Set the desired image area to be scanned.**

Use the Crop Frame in the Preview Window to outline the image area you wish to scan. Click one of the sides or corners of the Crop Frame and drag it out or in to the desired length and width.

To move the entire Crop Frame, position the mouse cursor inside it and drag with the left mouse button.

Only the area inside the Crop Frame will be included in the resulting scanned image when you click Scan. The size information at the bottom of the dialog box is automatically updated when the Crop Frame is resized.



2. **Select the scan source.**

Since we are going to scan a color photograph, choose Reflective.

Reflective:

when scanning paper-based documents such as photographs or text (magazines, books, or images).

3. **Select the desired scan mode.**

The Scan Mode determines how the scanner will read the image.

- Color (48-bit) captures 48 bits of color image information for every pixel in the screen image. Reproduce billion of colors.
This option is disabled when the TWAIN-compliant program you used does not support 48-bit color output.
- Color (24-bit) captures 24 bits of color image information for every pixel in the screen image. Reproduce over 16.7 million colors.
- Gray (16-bit) captures 16 bits of grayscale image information for every pixel in the screen image. Reproduce up to 65536 shades of gray.
This option is disabled when the TWAIN-compliant program you used does not support 16-bit grayscale output.
- Gray (8-bit) captures 8 bits of grayscale image information for every pixel in the screen image. Reproduce up to 256 shades of gray.
- Lineart (1-bit) is used for text documents or black-and-white images.

SCANNING USING TWAIN INTERFACE IN WINDOWS (CONTINUED)

4. Select the desired resolution.

Resolution is a measure of how much image detail information the scanner is to capture in a scan. A higher resolution results to a sharper image but requires more disk space for file saving. For this session, set the resolution to 300 dpi.

Execute the Scan Command

When you are finished with the control settings, click on the Scan button. The scanner begins to scan the document and a message box appears on the screen displaying the progress of the scan.



When the scan is finished, the image will be displayed in the main screen of the host software.

Using Batch Scan


Batch scanning is an easy way to multi-scan any part of your document using different scan modes and resolutions. In batch scanning, you can specify up to a maximum of 30 scan regions, or you can scan a single region several times using different combinations of scan modes and resolutions.



To activate batch scanning, click on the Batch Scan button. This will bring up the Batch Scan dialog box.

The Batch Scan Dialog Box

The Batch Scan dialog box contains several controls that make batch scanning simple and easy to use. It will also display the number of batch jobs that you make when you create the scan regions.

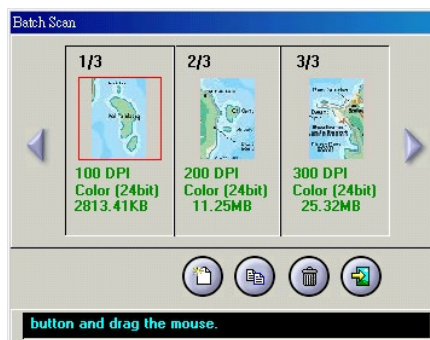

• New Batch Button

Click on this button to create a new scan region on the image in the Preview Window.



• Duplicate Batch Button

Click on this button to duplicate a batch job. You can then specify different control settings for this particular batch job.



• Trash Batch Button

Click on this button to delete the selected or highlighted batch job.

SCANNING USING TWAIN INTERFACE IN WINDOWS (CONTINUED)



● **Cancel Batch Button**

Click on this button to cancel batch scan and exit the Batch Scan dialog box.

To perform a batch scan, the steps are:

1. Click the Batch Scan button. The Batch Scan dialog box appears.
2. Create a scan region:
 - (a) Move the cursor inside the Preview Window.
 - (b) Hold down the Shift key, press the left mouse button and drag the mouse to create a crop frame.
 - (c) Reposition or resize the crop frame if necessary.
3. Set the desired scan mode and resolution for the current scan region.
4. Repeat steps 2 and 3 if you wish to create additional scan regions.



NOTE

Using the Batch Scan arrows allows you to view the different batch jobs.

5. Click Scan. The scanner will begin to scan the batch jobs one after the other.



The Batch Box contains the thumbnail image, DPI, scan mode and image size of each batch scan. The batch number (e.g. 1/3, number one out of three) is always displayed at the top of the batch box along with the Batch Scan Status.

SCANNING USING TWAIN INTERFACE IN MAC

Acquire the Scanner TWAIN Interface

The TWAIN driver is the scanning module provided with your scanner. It is easily accessed from within the bundled scanner software or from within any TWAIN-compliant program, such as ImageAcquire, Photoshop. Before you start with the steps below, be sure you have installed and configured the bundled scanner software from the DVD included.

Following is an example of using ImageAcquire.

 
1. Open “Finder”, and then click “Applications”. Find ImageAcquire [📁] icon in the Application folder, and then double click on it.
2. Select the Scanner model from the Image Acquire window, and then click “Acquire” to open the TWAIN interface.




NOTE

In some programs, the Acquire command will appear in a submenu under the Import command.

Select "PageExpress
4800 Pro"
Acquire



3. The TWAIN interface appears as following.

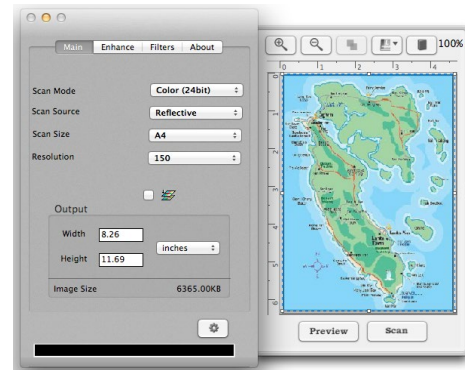


The TWAIN interface contains control settings, which you must set prior to scanning a document. The basic steps to scan a document are:

1. Click on the **Preview** button to prescan and preview your original.
2. Set the desired image area to be scanned.
3. Select the scan source.
4. Select the scan mode.
5. Select the resolution.
6. Click on the **Scan** button.

SCANNING USING TWAIN INTERFACE IN MAC (CONTINUED)

The TWAIN Interface

The TWAIN interface is divided into two sections: the left section where most of the control settings are located, and the right section, which is the Preview Window.

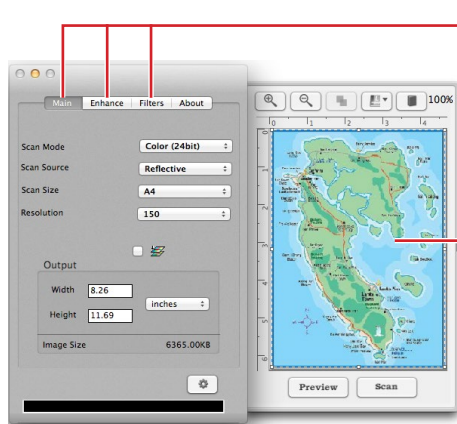

Settings Tabs
Contain different control settings, including Main, Enhance, and Filters.

Preview Window
Used for viewing the prescan image.

The Main Tab

The main folder contains the control settings needed for specifying the scanning parameters such as scan mode, resolution, etc.

Scan Mode

Sets the scanner to read color, grayscale, lineart, etc.

Scan Source

Sets the media type of the document to be scanned.

Scan Size

Refers to the size of the image or document that you are about to scan.

Resolution

Sets the resolution in dots per inch (dpi).

Color Matching Control


Color Matching allows the scanner to more accurately reflect the actual colors of the original image.

Image Size

Displays the amount of computer space needed to display or save the selected image area.

Width and Length

Show the dimensions of the image area inside the Cropping Frame.

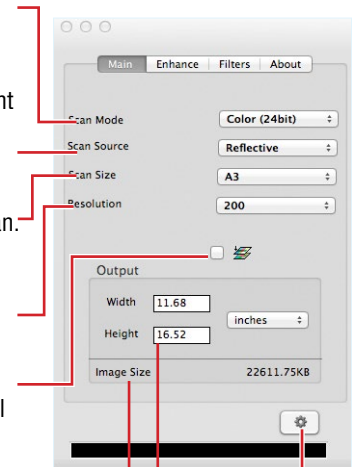

Reset Button
Returns settings to their default values.

SCANNING USING TWAIN INTERFACE IN MAC (CONTINUED)

The Enhance Tab

The Enhancement folder contains preprocessing controls you can apply to the image before making your final scan.

Thumbnails

Are used to see the effects of any changes in the control settings.

Channel Selector Control

Allows you to select the channel layers (red, green and blue) that make up a color image. You can choose to change the channels individually or choose master to change all channels equally and simultaneously.

Brightness Control


Allows you to adjust the overall amount of light in the image through a range of values (-127 ~0~+127).

Contrast Control

The Contrast Control allows you to adjust the overall amount of black areas or white areas in the image through a range of values (-127~0~+127).

Gamma Control

Adjusts the brightness level in the highlights, midtones, and shadows of the image.(0.1~7.9)

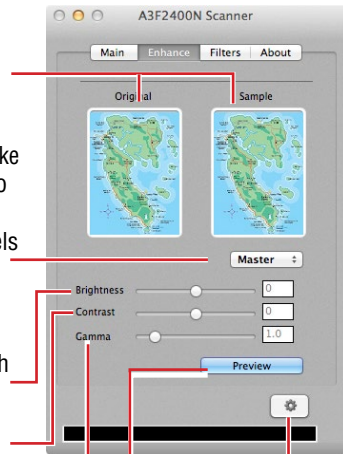

Reset Button

Returns settings to their default values.

Preview Button

This button allows you to see the effect of any changes made to the image.

The Filters Tab

The Filters folder contains preprocessing controls that allow you to apply special effects to the image before making your final scan.

Thumbnails

Are used to see the effects of any changes in the control settings.

None

No filter is applied.

Blur

Smooths or softens the image.

Sharpen

Enhances the detail in the image.

Invert

Reverses an image to its negative or compliment.

Flip


Creates a mirror image of the original.

Emboss

Makes the elements in the image appear raised or sunken.

Unsharp Mask

Emphasizes shape edges and color boundaries.

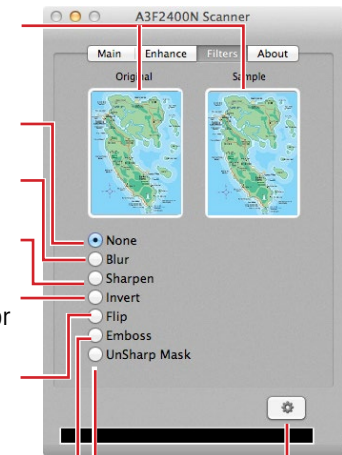

Reset Button

Returns settings to their default values.

SCANNING USING TWAIN INTERFACE IN MAC (CONTINUED)

The Preview Window

The Preview Window is where you can view the prescanned image. The first time you want to scan a document, it is better that you do a precan.

Zoom Tool Button

Allows you to enlarge/shrink an area of the image in the Preview Window.

Batch Scan Button

Allows creation of up to 10 scan regions for Crop Frames for multiple scanning.

Language Setting

Allows you to select the desired language that the dialog box will be displayed in.

Exit Button

Click to exit (or close) the TWAIN or Batch Scan Dialog boxes.

Crop Frame


Outlines the scan area or region that will be included in the final scan.

Previous Button

Allows you to see the effect of any changes made to the image prior to scanning.

Save Button

Processes the pre-scanned image, and displays it in the host software (where you opened up the TWAIN dialog box).

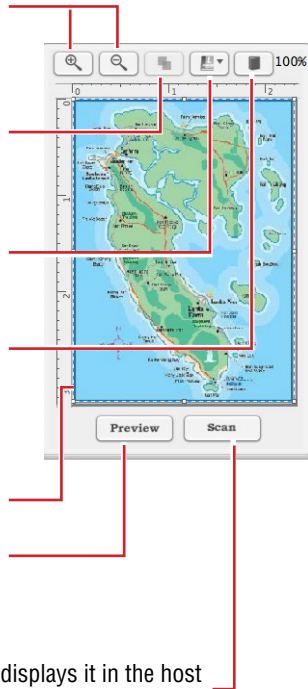

Prescan the Image

A Preview is a quick low-resolution scan of the entire original image. From this low-resolution scan you can get a clearer idea of the image area you want to include when you click Scan.

To Preview, the steps are:

1. Place the document face down on the scan window glass.

2. Click the Preview button in the dialog box. After the scanner has scanned the document, the scanned image will appear in the Preview Window. From the preview image, you can now set the exact image area you wish to include in your final scan.



Set Up the Scan Parameters

1. **Set the desired image area to be scanned.**

Use the Crop Frame in the Preview Window to outline the image area you wish to scan. Click one of the sides or corners of the Crop Frame and drag it out or in to the desired length and width.

Only the area inside the Crop Frame will be included in the resulting scanned image when you click Scan. The size information at the bottom of the dialog box is automatically updated when the Crop Frame is resized.



SCANNING USING TWAIN INTERFACE IN MAC (CONTINUED)

2. Select the scan source.

Since we are going to scan a color photograph, choose Reflective.

Reflective:

when scanning paper-based documents such as photographs or text (magazines, books, or images).

3. Select the desired scan mode.

The Scan Mode determines how the scanner will read the image.

 
- Color (48-bit) captures 48 bits of color image information for every pixel in the screen image. Reproduce billion of colors.
This option is disabled when the TWAIN-compliant program you used does not support 48-bit color output.
- Color (24-bit) captures 24 bits of color image information for every pixel in the screen image. Reproduce over 16.7 million colors.
- Gray (16-bit) captures 16 bits of grayscale image information for every pixel in the screen image. Reproduce up to 65536 shades of gray.
This option is disabled when the TWAIN-compliant program you used does not support 16-bit grayscale output.
- Gray (8-bit) captures 8 bits of grayscale image information for every pixel in the screen image. Reproduce up to 256 shades of gray.
- Lineart (1-bit) is used for text documents or black-and-white images.

4. Select the desired resolution.

Resolution is a measure of how much image detail information the scanner is to capture in a scan. A higher resolution results to a sharper image but requires more disk space for file saving. For this session, set the resolution to 300 dpi.

Execute the Scan Command

When you are finished with the control settings, click on the Scan button. The scanner begins to scan the document and a message box appears on the screen displaying the progress of the scan.

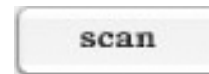

When the scan is finished, the image will be displayed in the main screen of the host software.

Using Batch Scan



Batch scanning is an easy way to multi-scan any part of your document using different scan modes and resolutions. In batch scanning, you can specify up to a maximum of 10 scan regions, or you can scan a single region several times using different combinations of scan modes and resolutions.




To activate batch scanning, click on the Batch Scan button. This will bring up the Batch Scan dialog box (ImageAcquire does not support the Batch Scan).

SCANNING USING TWAIN INTERFACE IN MAC (CONTINUED)

The Batch Scan Dialog Box

The Batch Scan dialog box contains several controls that make batch scanning simple and easy to use. It will also display the number of batch jobs that you make when you create the scan regions.

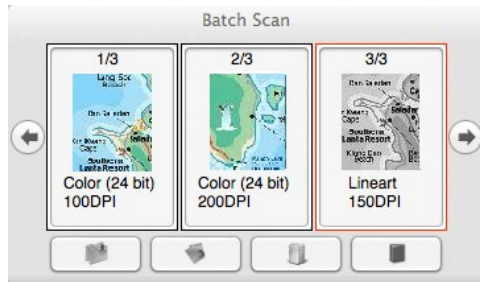

• Copy Batch Button



Click on this button to duplicate a batch job. You can then specify different control settings for this particular batch job.

• New Batch Button



Click on this button to create a new scan region on the image in the Preview Window.

• Delete Batch Button



Click on this button to delete the selected or highlighted batch job.

• Exit Batch Button



Click on this button to cancel batch scan and exit the Batch Scan dialog box.

To do a batch scan, the steps are:

1. Click the Batch Scan button. The Batch Scan dialog box appears.
2. Create a scan region:
 - (a) Move the cursor inside the Preview Window.
 - (b) Hold down the Shift key, press the left mouse button and drag the mouse to create a crop frame.
 - (c) Reposition or resize the crop frame if necessary.
3. Set the desired scan mode and resolution for the current scan region.
4. Repeat steps 2 and 3 if you wish to create more scan regions. You can have up to 10 scan regions. If you want to duplicate the current scan region, simply click on the **Duplicate Batch** Button.
5. Click **Scan**. The scanner will begin to scan the scan regions one after the other.

For scanning multiple documents or images, Batch Scan is equipped with an auto crop function that is not available in the regular scanning mode. Batch Scan auto-detects the borders of the images or paper edges of the documents, allowing you the option of scanning any or all of these images/documents without having manually select, and scan them individually (as required in the regular mode.)

The Batch Box contains the thumbnail image, DPI, scan mode and image size of each batch scan. The batch number (e.g. 1/3, number one out of three) is always displayed at the top of the batch box along with the Batch Scan Status.


CLEANING THE SCANNER

Dust and residues can build up on the Scanner's Flatbed Glass to affect image quality. Clean the Scanner periodically to get the best scanning performance.



CAUTION

- Never spray the cleaner directly onto the Scanner.
 - Do not use any abrasive surfaces to clean the Scanner. Doing so may damage it.
 - Do not press on the Scanner Glass with too much force as this will cause damage to the glass surface.
1. Unplug the USB Cable.
 2. Use a clean, soft cloth moistened with water or mild detergent to clean the outside of the Scanner.
 3. Use a clean, soft cloth moistened with a small amount of glass cleaner to remove dust, grease, and stains on the Flatbed Glass. Wipe off all remaining liquid.

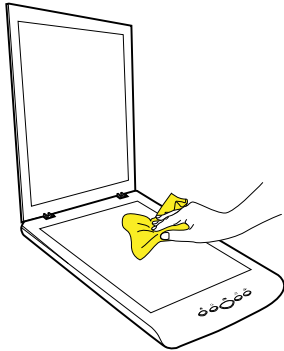

TROUBLESHOOTING

Problems	Solutions
The "Found New Hardware" appears on your Windows screen.	<ul style="list-style-type: none">● Unplug the USB Cable from the computer, and click "Cancel" button to close it. Ensure to install Scanner Driver before connecting the Scanner.
Cannot scan.	<ul style="list-style-type: none">● Make sure that the USB Cable between the Scanner and your computer is connected firmly.● Make sure the correct scanner is selected in the select source field.
The scanned image becomes dirty.	<ul style="list-style-type: none">● Check if the document is written in lead pencil or wet ink.● Make sure to clean the Scanner's Flatbed Glass frequently.
Scanning speed is very slow.	<ul style="list-style-type: none">● Scanning takes longer than usual when you scan at high resolution and large size.● Set a lower resolution in the settings to prioritize the scanning speed.● Scanning with multiple image processing can slow down the scanning speed.
Cannot acquire the Scanner from Photoshop.	<ul style="list-style-type: none">● You need to install the Photoshop TWAIN plug-in prior to use. Refer to "Using TWAIN in Photoshop CS4-CC version.pdf" in the Installation DVD.
Scanned image edges are cropped.	<ul style="list-style-type: none">● Make sure your original is placed correctly for scanning.● When scanning darker originals (i.e. night scenery photos), over-cropping may occur.
Text created by the OCR software is incorrect.	<ul style="list-style-type: none">● Select a resolution of minimum 300 dpi in the software settings. The OCR software may not always convert all text correctly. Please check the document for any errors that the OCR may have missed.● The OCR recognition result is generally more accurate with the text-based digital images. Images with mixed content (text, images, and graphics all in the one page) may result less accurate.● Set the Scanner color settings to "B/W" if the text is black against a white background.● Check if the quality of the original document is poor through the OCR recognition process.
The preview image appears blurry or fuzzy	<ul style="list-style-type: none">● The preview image appears in the Preview Area is a scaled down lower resolution image, meant to quickly display the preview image.

SPECIFICATIONS

Model	PE4800 Pro
Scanning Element	Contact Image Sensor (CIS)
Light Source	Three-color (RGB) LEDs
Scan Mode	Color: 48-bit, 24-bit Gray: 16-bit, 8-bit Line art: 1-bit * Color (48-bit) and Gray (16-bit) are available in the TWAIN interface only. * Color (48-bit) and Gray (16-bit) are disabled when the TWAIN-compliant program you used does not support 48-bit color and 16-bit output.
Scan Area (Max.)	A4 / Letter (216mm x 297mm / 8.5" x 11.68")
Effective Pixels	11744 x 11744 pixels at 4800 dpi (Scanning area in the Advanced Mode of iDocScan Touch will be restricted if the Scan Resolution setting is large)
Optical Resolution	4800 dpi x 4800 dpi
Enhanced Resolution	19200 dpi x 19200 dpi * Enhanced Resolution is available in the TWAIN interface only.
Interface	USB 2.0
Scanner Buttons	5 Function Buttons
Power Supply	by USB Bus Power (5V, 500mA)
Power Consumption	In operation : 2.5 W (Max) Standby: 1 W
Operation Temperature and Humidity	10 °C - 35 °C (50 °F - 95 °F) ; 10% to 85%
Dimension (L x W x H)	385 x 252 x 50 mm (15.16" x 9.92" x 19.69")
Weight	1.66 kgs (3.66 lbs)

A decorative graphic on the left side of the page, consisting of a dark green background with a curved white border and a light green curved band inside it.

PageExpress 4800 Pro